Section XVI: Wiring diagram

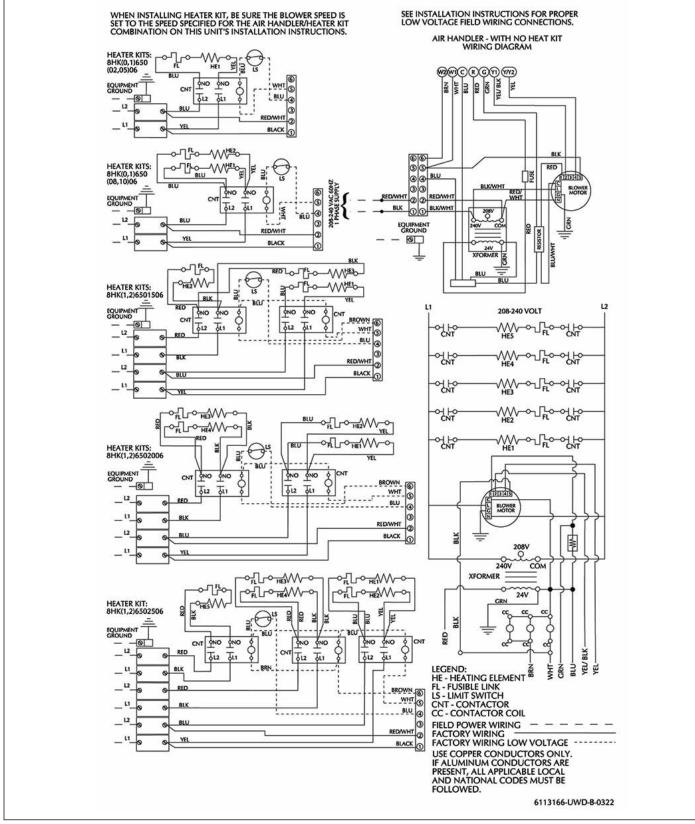


Figure 20: Wiring diagram - standard ECM - single phase heat kits

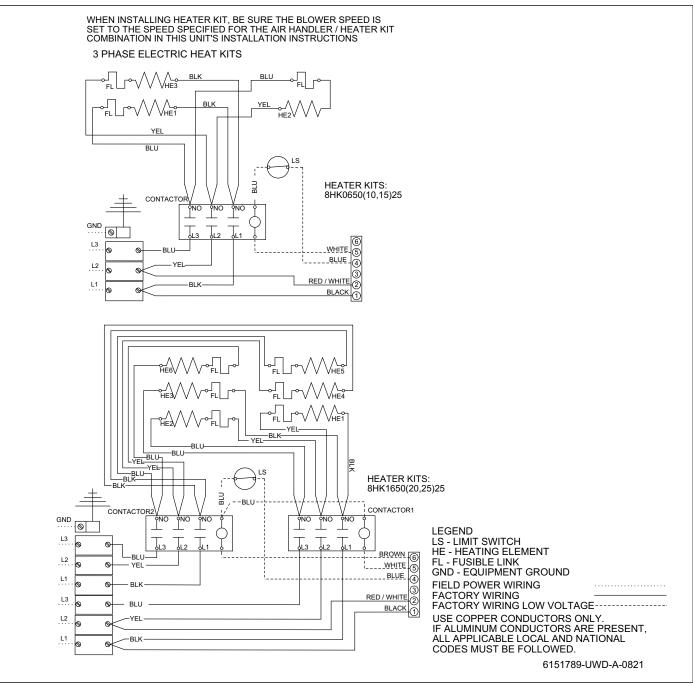


Figure 21: Wiring diagram - 208/230V three phase heat kits

Section XVII: Control wiring

NOTICE

For Figure 22, Figure 23, Figure 24, and Figure 25: Continuous fan (G) indoor blower speed tap must be set for a lower speed than first stage compressor speed. If the lowest blower speed tap must be used for first stage compressor speed, do not use the air handler Y1 connection. Allow the room thermostat to energize (G) for first stage compressor blower speed.

NOTICE

For Figure 22, Figure 25, and Figure 27:

Do not bond any of the outdoor unit **W** wires together.

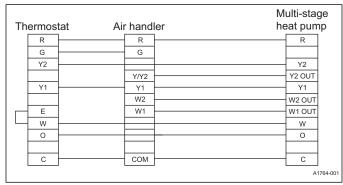


Figure 22: Standard ECM AH and premium multi-stage HP - conventional wiring

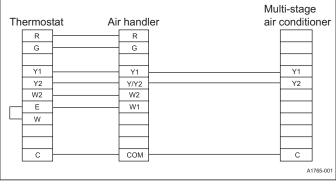


Figure 23: Standard ECM AH and standard multi-stage AC - conventional wiring




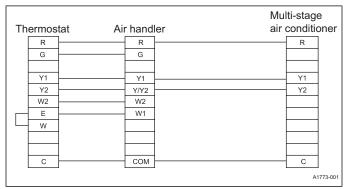


Figure 24: Standard ECM AH and premium multi-stage AC - conventional wiring

		Multi-stage	
Thermostat	Air handler	heat pump	
R	R	R	
G	G		
Y2		Y2	
	Y/Y2	Y2 OUT	
Y1	Y1	Y	
W2	W2		
E	W1	W OUT	
0		0	
С	СОМ	C	
		A176	

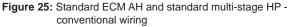

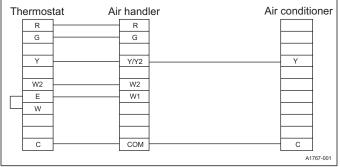

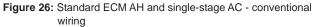

Thermostat Air		r handler		t pump
R]	R		R
G]	G		
		Y1		
Y1		Y/Y2		Y
W2		W2		
	4	W1	W	/ OUT
W W	-			W
0	-			0
С		СОМ		С
				A1768-001

Figure 27: Standard ECM AH and single-stage HP - conventional wiring

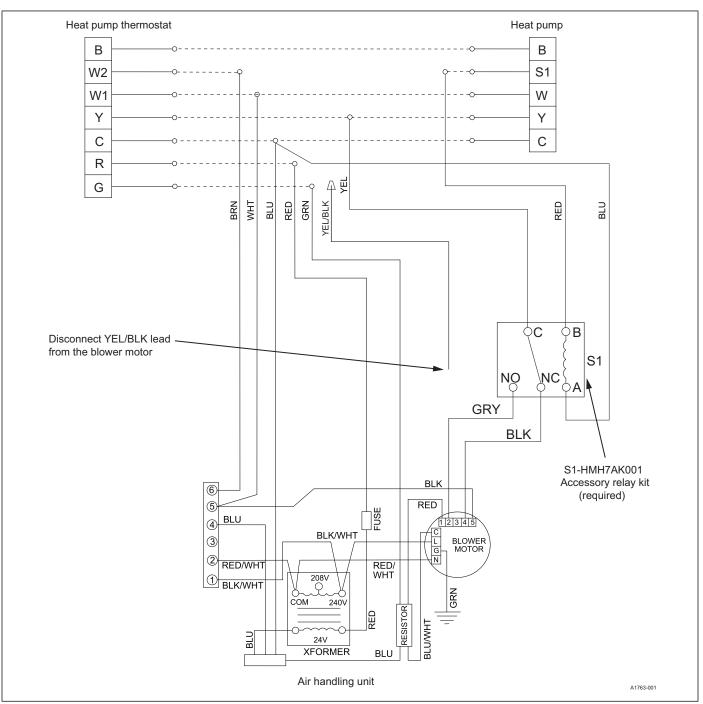


Figure 28: HMH7 HP connection