

SECTION XVI: WIRING DIAGRAM

WHEN INSTALLING HEATER KIT, BE SURE THE BLOWER SPEED IS SET TO THE SPEED SPECIFIED FOR THE AIR HANDLER/HEATER KIT COMBINATION ON THIS UNIT'S INSTALLATION INSTRUCTIONS. SEE INSTALLATION INSTRUCTIONS FOR PROPER LOW VOLTAGE FIELD WIRING CONNECTIONS.

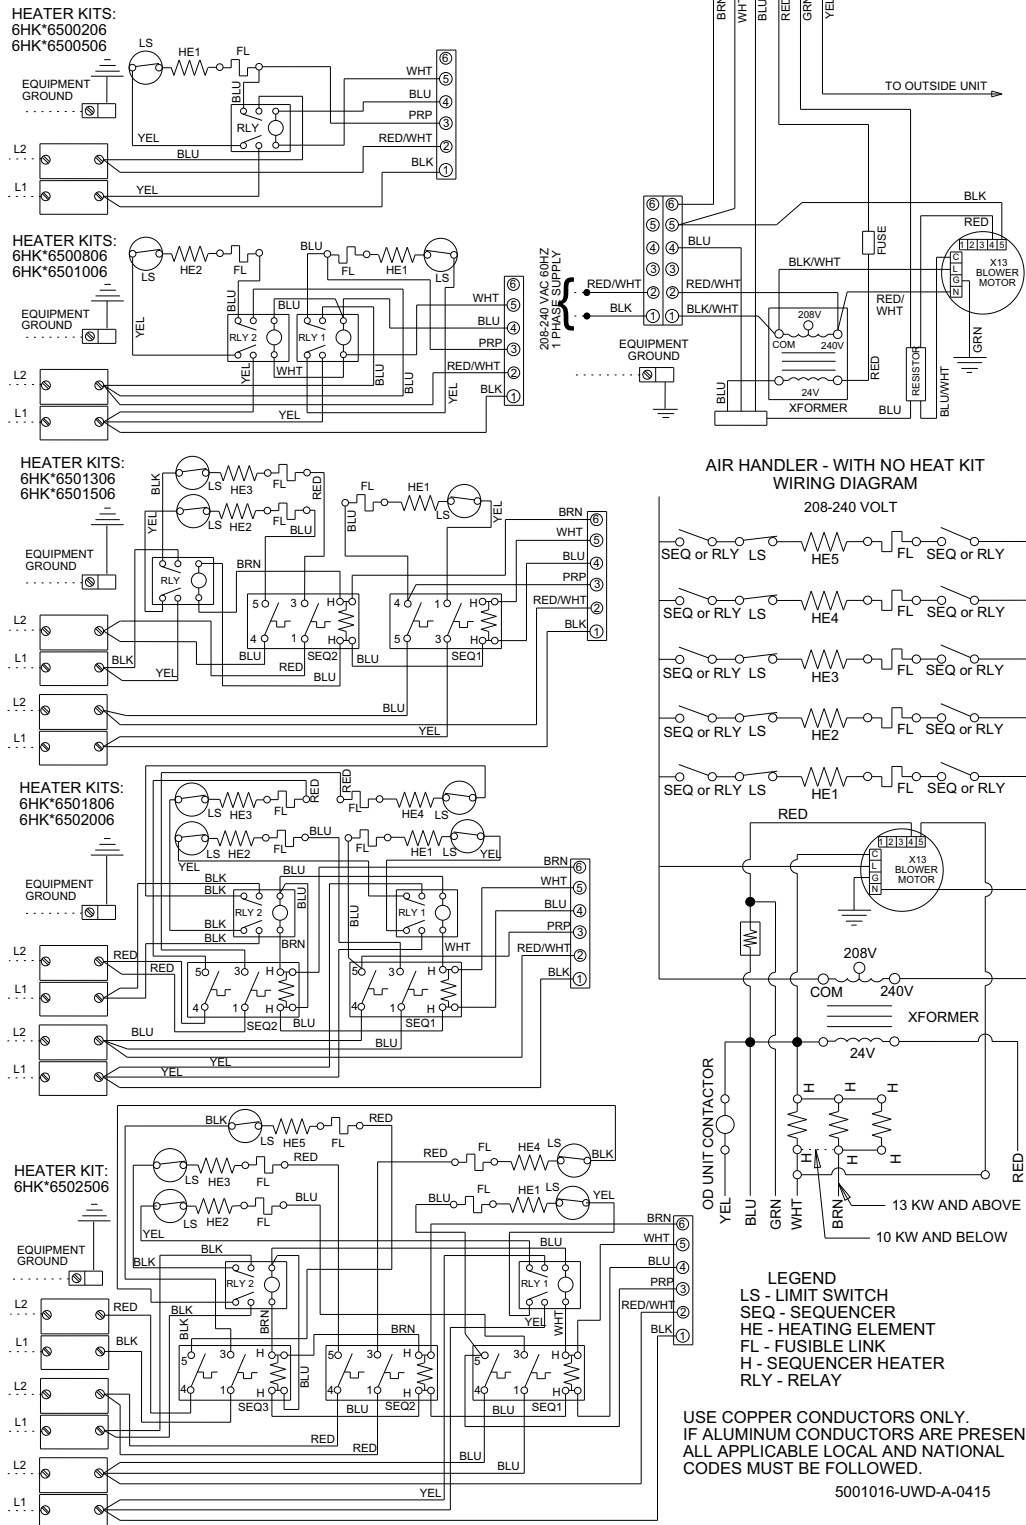


FIGURE 27: Wiring Diagram - Standard ECM - Single Phase Heat Kits

3 PHASE ELECTRIC HEAT KITS

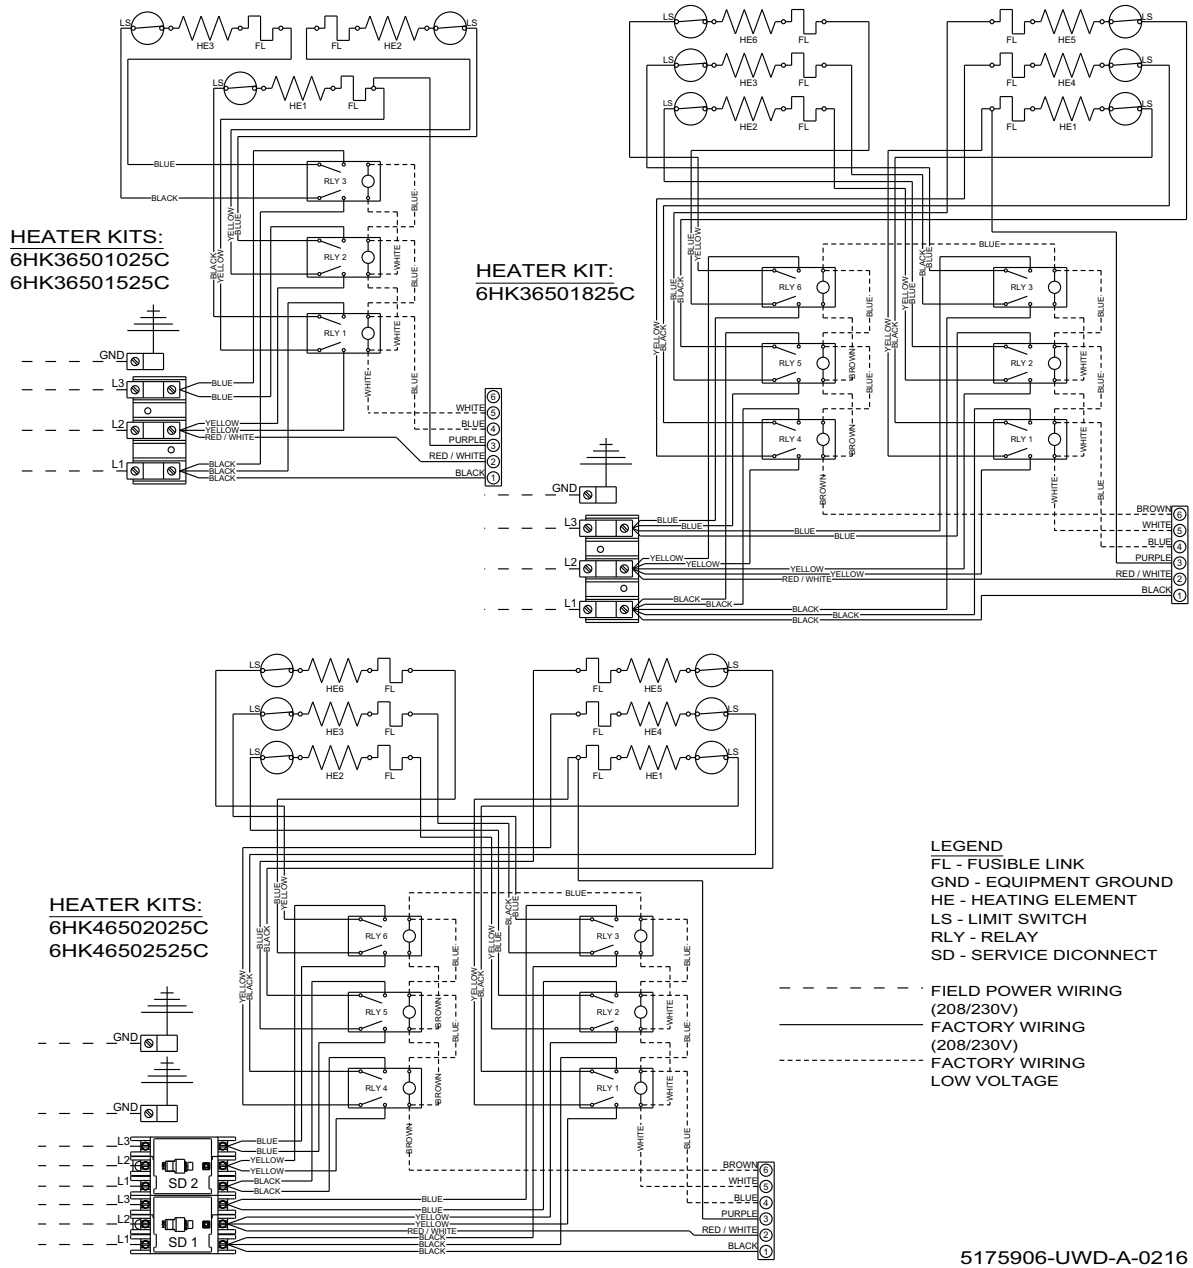


FIGURE 28: Wiring Diagram - Three Phase Heat Kits 208-230V

SECTION XVII: TYPICAL THERMOSTAT CONNECTIONS

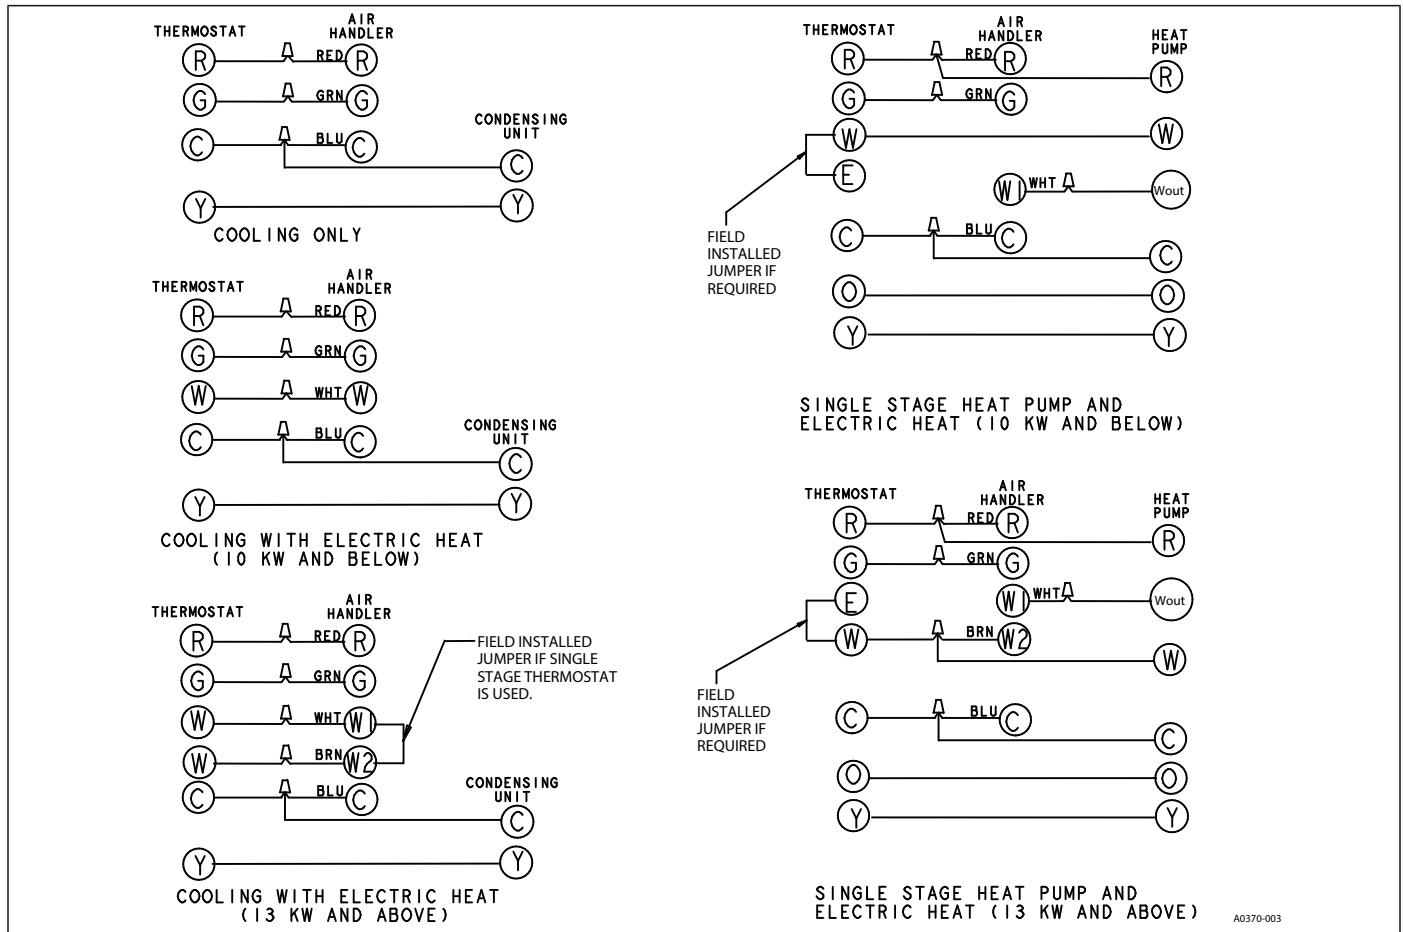


FIGURE 29: Typical Thermostat Wiring Diagram - ECM

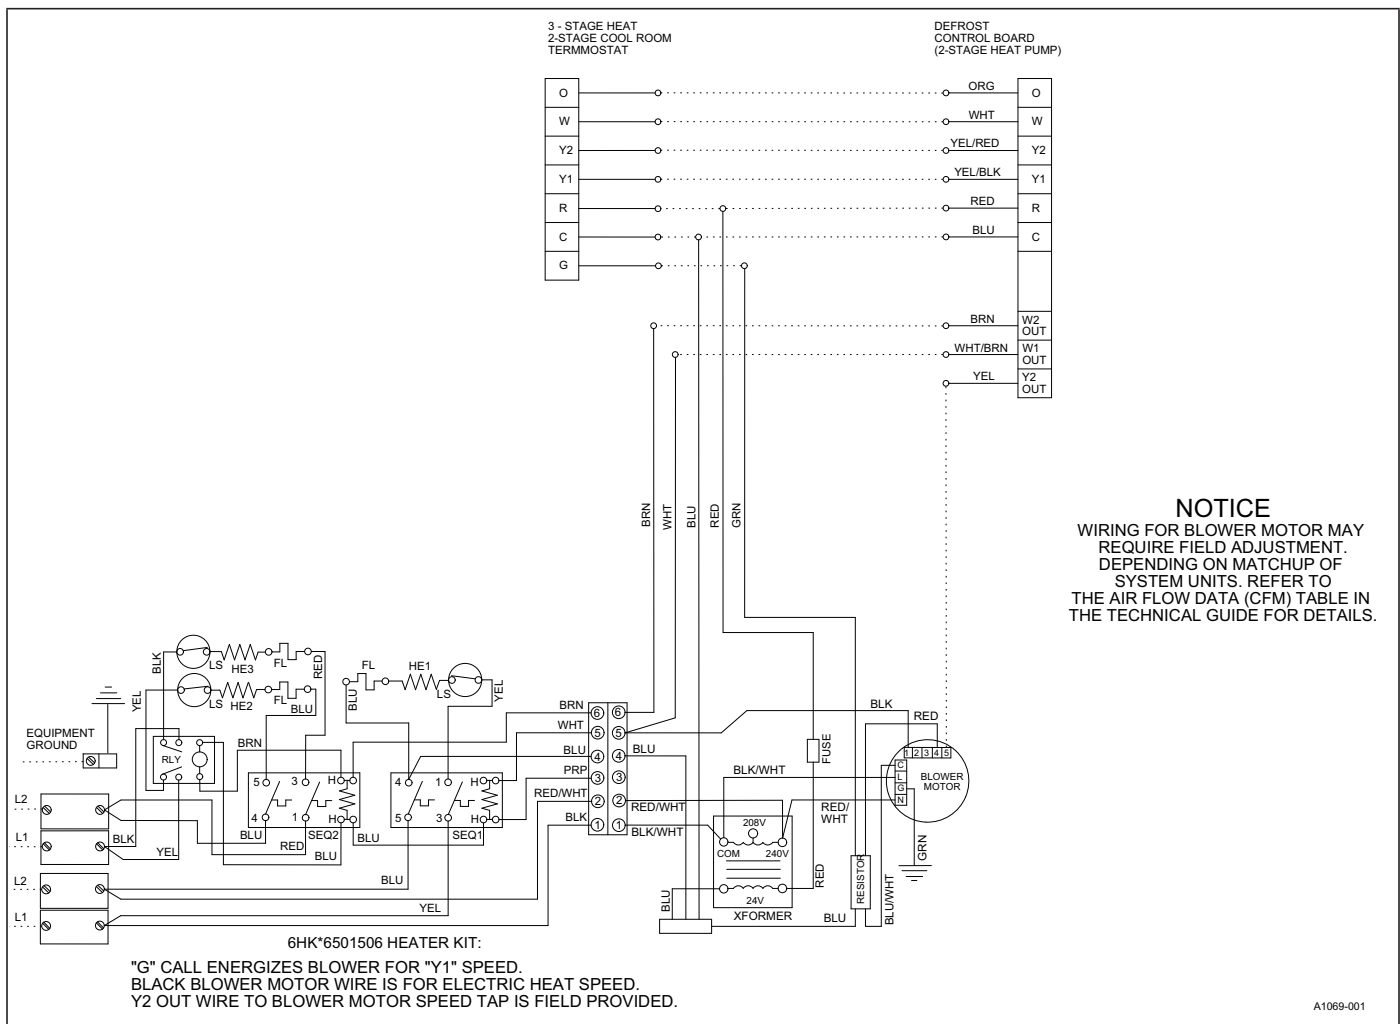


FIGURE 30: Typical Thermostat Wiring Diagram - 2 Stage Heat Pump with ECM Blower Motor