


Minimum wire size of 18 AWG wire should be used for all field installed control wiring.

THERMOSTAT

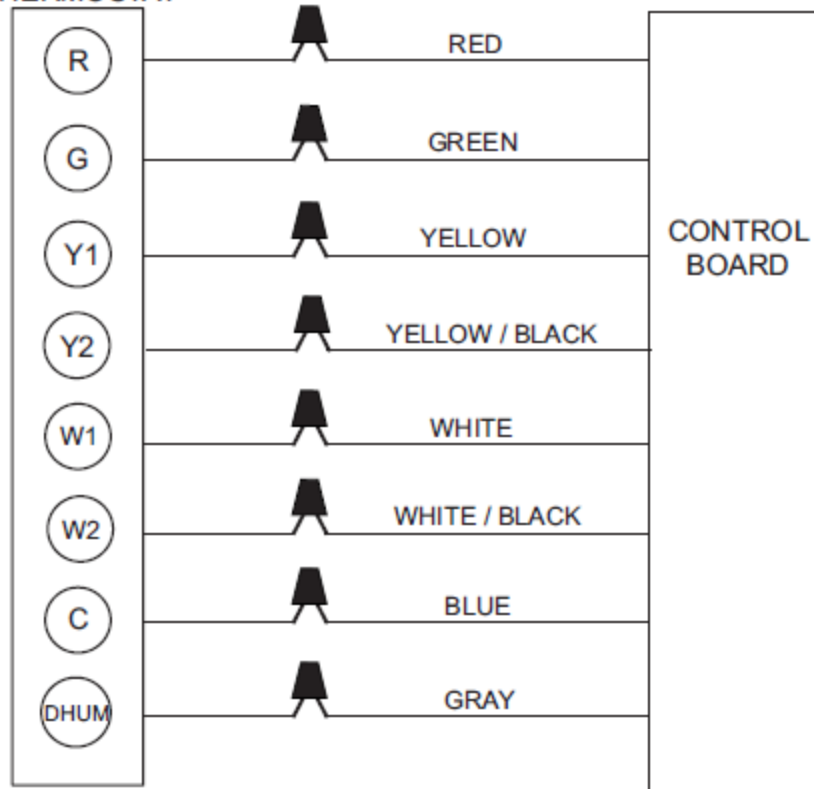

NOTE:

Heat Anticipator should be set at 0.35 AMPS for all models.

A0602-001

FIGURE 6: Typical Field Control Wiring Diagram For Gas Heat - AC Models