


Minimum wire size of 18 AWG wire should be used for all field installed control wiring.

THERMOSTAT

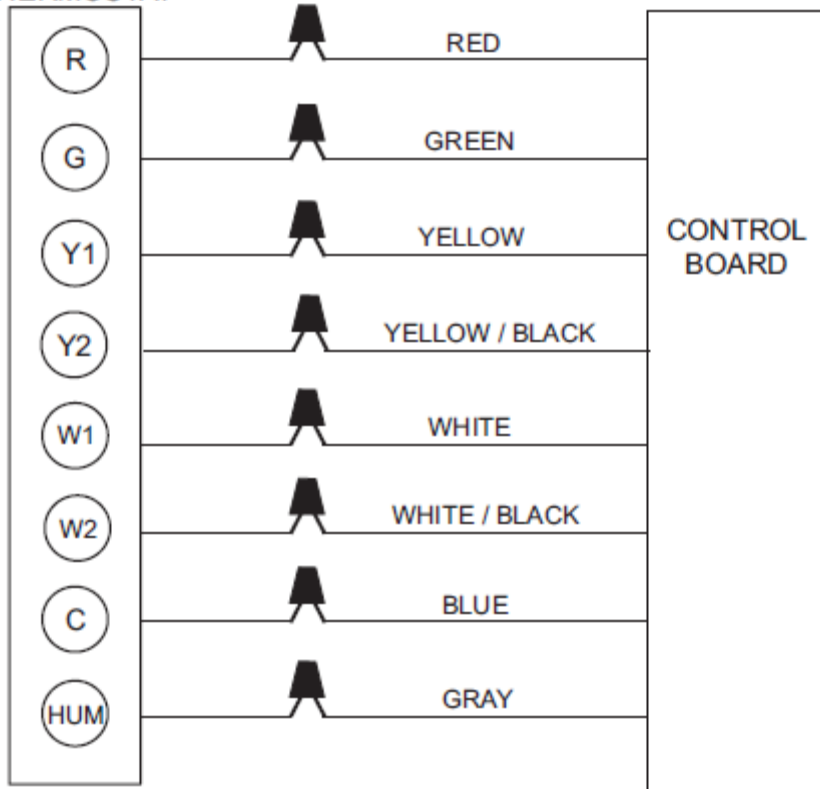

CONTROL BOARD

NOTE:

Heat Anticipator should be set at 0.35 AMPS for all models.

A0566-001

FIGURE 6: Typical Field Control Wiring Diagram For Air Conditioner Models