Tabular Data Sheet


LX Series Split System Air Conditioners

14.3 SEER2 – R-454B – 1 Phase – 1.5 to 5 Nominal Ton Models: XC418 to 60

Physical and electrical data

Model		XC418E2S11	XC424E2S11	XC430E2S11	XC436E2S11	XC442E2S11	XC448E2S11	XC460E2S11		
Unit supply voltage		208-230 V, 1φ, 60 Hz								
Normal voltage range ¹		187 to 252								
Minimum circuit ampacity		9.0	13.4	16.2	19.0	18.9	29.1	30.7		
Maximum overcurrent device (A) ²		15	20	25	30	30	50	50		
Minimum overcurrent device (A) ³		15	15	20	20	20	30	35		
Compressor	Type ⁴	1-stage rotary	1-stage scroll							
	Rated load (A)	6.7	10.2	12.5	14.4	14.3	22.4	23.7		
	Locked rotor (A)	33.0	60.2	67.0	86.0	95.0	126.0	157.0		
Crankcase heater		No	No	No	No	No	No	No		
Factory external discharge muffler		No	No	No	No	No	No	No		
Hard start kit required with TXV ⁵		No	No	No	No	No	No	No		
Hard start kit part number (S1-2SA067*****)		22006	10106	10106	10106	10106	10106	10106		
Fan diameter (in.)		22	22	22	24	26	24	26		
Fan motor	Туре	PSC	PSC	PSC	PSC	PSC	PSC	PSC		
	Rated HP	1/12	1/12	1/12	1/4	1/4	1/4	1/4		
	Rated load (A)	0.64	0.64	0.64	1.30	1.05	1.30	1.05		
	Nominal RPM	1000	1000	1000	850	850	850	850		
	Nominal CFM	2275	2275	2275	3500	4300	3550	4300		
Coil	Face area (sq ft)	13.83	13.83	19.22	18.74	23.40	21.06	27.40		
	Rows deep	1	1	1	1	1	1	1		
	Fins per inch	23	23	23	23	23	23	23		
Liquid refrigerant piping outdoor (field-installed)		3/8	3/8	3/8	3/8	3/8	3/8	3/8		
Vapor refrigerant piping outdoor (field-installed) ⁶		3/4	3/4	3/4	3/4	7/8	7/8	1 1/8 [‡]		
Unit charge (lb - oz) ⁷		2-8	2-10	3-0	3-2	3-6	3-11	5-3		
Charge (oz/ft)		0.57	0.57	0.57	0.57	0.60	0.60	0.67		
Operating weight (lb)		150	150	165	185	230	215	235		

- 1. Rated in accordance with AHRI Standard 110-2012, utilization range A.
- 2. Dual element fuses or HACR circuit breaker. Maximum allowable overcurrent protection.
- 3. Dual element fuses or HACR circuit breaker. Minimum recommended overcurrent protection.
- 4. Rotary compressor models are limited to an equivalent length of refrigerant piping of 100 ft with no exceptions.
- 5. Refer to the Hard Start Kit Accessory Installation Manual for the hard start kit part number for each model. The hard start kit is a field-installed accessory.
- 6. For applications with non-standard vapor line sizes, refer to the Applications and accessories section in the Technical Guide.
- 7. The unit charge is correct for the outdoor unit, smallest matched indoor unit, and 15 ft of refrigerant tubing. For tubing lengths other than 15 ft, add or subtract the amount of refrigerant, using the difference in actual refrigerant piping length (not the equivalent length) multiplied by the per foot value.
- ‡ The adapter fitting must be field-installed for the required 1 1/8 in. refrigerant piping.

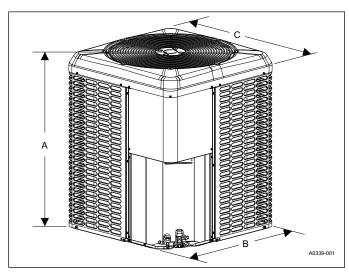

Dimensions

Unit model	D	imensioı (in.)	ns	Refrigerant connection service valve size (in.)		
	Α	В	С	Liquid	Vapor	
XC418E2S11	30	29 1/4	29 1/4		3/4	
XC424E2S11	30	29 1/4	29 1/4			
XC430E2S11	39 1/2	29 1/4	29 1/4			
XC436E2S11	33 1/4	35 1/4	31 3/4	3/8		
XC442E2S11	36 1/4	38	34 1/4		7/8	
XC448E2S11	36 1/4	35 1/4	31 3/4		1/0	
XC460E2S11	42 3/4	38	34 1/4		7/8 [‡]	

Notes:

- ‡ Adapter fitting must be field installed for the required 1 1/8 in. refrigerant piping. All dimensions are in inches and are subject to change without notice.
- Overall height is from the bottom of the base pan to the top of the fan guard. Overall length and width include screw heads.

System charge for various matched systems

Outdoor unit	XC418E2S11	XC424E2S11	XC430E2S11	XC436E2S11	XC442E2S11	XC448E2S11	XC460E2S11	
Required indoor metering device ^{1,2}	5A1	5A1	5A1	5C1	5C1	5C1	5C1	
Indoor unit ^{3,4,5}	Additional charge (oz)							
JHE18B**B	4	_	_	_	_	_	_	
JHE24B**C	5	6	_	_	_	_	_	
JHE30B**D	_	_	12	_	_	_	_	
JHE36(B,C)**D	_	_	12	12	_	_	_	
JHE42C**F	_	_	_	_	17	_	_	
JHE48(C,D)**G	_	_	_	_	_	16	_	
JHE60(C,D)**H	_	_	_	_	_	_	23	
JHE60D**J	_	_	_	_	_	_	27	
JHC18B**B	4	_	_	_	_	_	_	
JHC24B**C	5	6	_	_	_	_	_	
JHC36(B,C)**D	_	_	12	12	_	_	_	
JHC42(C,D)**F	_	_	_	_	17	_	_	
JHC48(C,D)**G	_	_	_	_	_	16	_	
JHC60(C,D)**H	_	_	_	_	_	_	23	
JHC60D**J	_	_	_	_	_	_	27	
CT(F,M,U)18A**A	_	_	_	_	_	_	_	
CTF18B**A	_	_	_	_	_	_	_	
CT(F,M,U)24A**B	4	5	_	_	_	_	_	
CT(F,M)24B**B	4	5	_	_	_	_	_	
CTF30A**D	_	_	12	_	_	_	_	
CT(F,M,U)30B**C	5	6	_	_	_	_	_	
CT(F,M)30C**C	5	6	_	_	_	_	_	
CT(F,M,U)36B**D	_	_	12	12	_	_	_	
CTF36B**E	_	_	_	14	_	_	_	
CT(F,M)36C**D	_	_	12	12	_	_	_	
CTF42C**E	_	_	14	14	14	_	_	
CTM42C**E	_	_	_	14	_	_	_	
CT(F,M,U)48C**F	_	_	_	_	17	12	_	
CT(F,M)48D**F	_	_	_	_	17	12	_	
CT(F,M,U)60C**G	_	_	_	_	_	16	_	
CT(F,M,U)60D**G	_	_	_	_	_	16	_	
CT(F,M)60C**H	_	_	_	_	_	_	23	
CT(F,M,U)60D**H	_	_	_	_	_	_	23	
CT(F,M)60D**J	_	_	_	_	_	_	27	

Note: Some of the combinations shown in this table require advanced main air circulating fan indoor product. For approved coil only matches, refer to the *Cooling capacity - upflow, downflow, and horizontal furnaces and coils* table in the *Technical Guide*.

- 1. For applications that require a TXV, use S1-1TVM*** series kit.
- 2. Use a TXV kit with these indoor units to obtain system performance.
- 3. Systems matched with furnaces or air handlers not equipped with blower-off delays may require blower time delay.
- 4. Do not use CTF, CTU, or CXF coils in horizontal applications. CTM coils can be used in horizontal, upflow, or downflow applications.
- 5. Charge adders shown above do not indicate that coils are rated for every application. Refer to the performance data tables in the *Technical Guide* for actual performance for specified system matches. Obtain certified system ratings from www.ahridirectory.org.

Charging

- 1. Check the factory unit charge listed on the unit nameplate to verify the refrigerant charge for the outdoor unit, the smallest matched indoor unit, and the 15 ft of interconnecting refrigeration piping.
- 2. Verify the indoor metering device and additional charge required for the specific matched indoor unit in the system using the table above.
- 3. Add additional charge for the amount of interconnecting refrigeration piping greater than 15 ft at the rate specified in the Physical and electrical data table.
- 4. For installations requiring additional charge, weigh in refrigerant for the specific matching indoor unit and actual refrigeration piping length.
- 5. After weighing in the charge adders for the matched indoor unit and refrigeration piping, verify the system operation against the temperatures and pressures in the charging chart for the outdoor unit. Locate the charging charts on the outdoor unit and also in the Service Data Application Guide on www.simplygettingthejob-done.com. Follow the subcool or superheat charging procedure in the Installation Manual according to the type of indoor metering device in the system, and allow 10 min after each charge adjustment for the system operation to stabilize. Record the charge adjustment made to match the charging chart.
- 6. Permanently stamp the unit nameplate with the total system charge defined as follows: total system charge = base charge (as shipped) + charge adder for matched indoor unit + charge adder for actual refrigeration piping length + charge adjustments to match the charging chart.